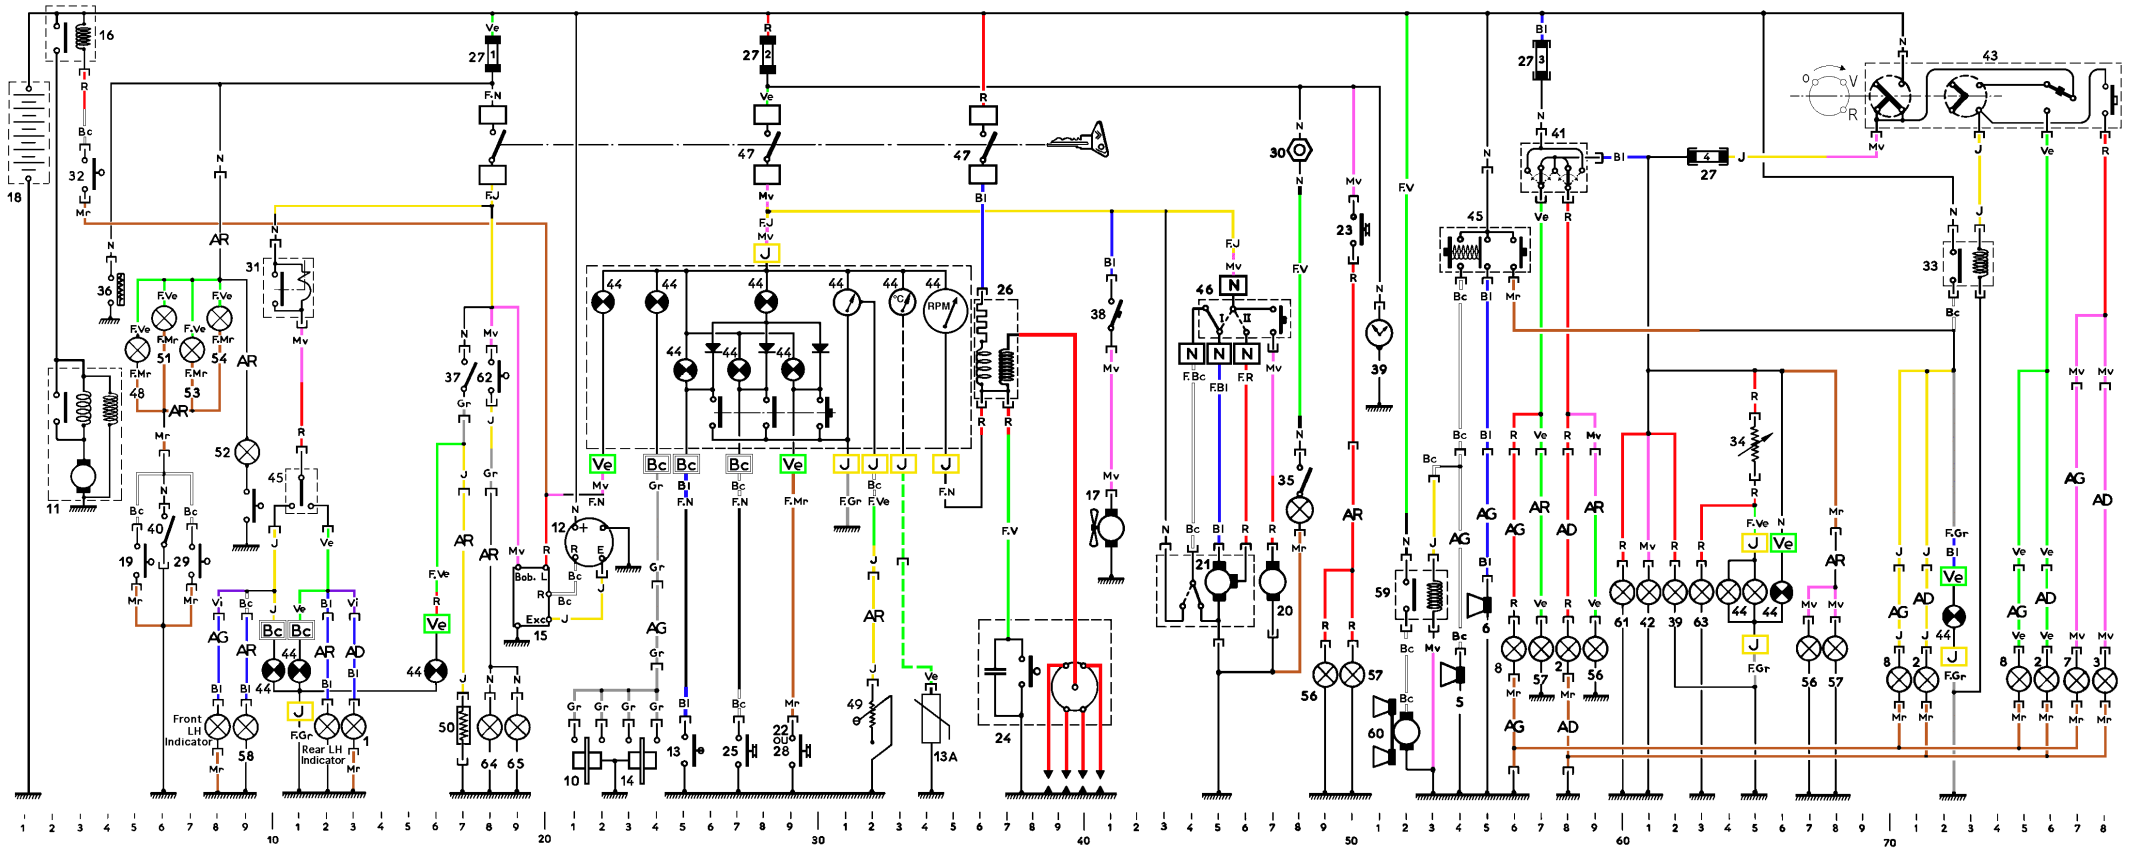

LIST OF PARTS

NOTE : *Ref* = reference number of parts on installation and basic diagrams. *Position* = number of the vertical line on which the part is situated on the basic diagram.

Ref	Description and Position
1	Front R.H. direction indicator. 13
2	R.H. headlamp unit : Main beam. 74
	- Dip 72
	- Sidelamp 58
3	R.H. auxiliary headlamp 78
5	2nd. Horn. 54
6	1st. Horn 55
7	L.H. auxiliary headlamp 77
8	L.H. headlamp unit : Main beam 73
	- Dip 71
	- Sidelamp 56
9	Front, L.H. direction indicator 8
10	R.H. brake unit. 21
11	Starter 3
12	Alternator 21
13	Thermal switch for water . . . 25
13A	Temperature sender *(option)*. . 34
14	L.H. brake unit. 23
15	Voltage regulator 20
16	Starter relay. 2

Ref	Description and Position
17	Heating unit 41
18	Battery 1
19	R.H. door switch 5
20	Windscreen washer pump 47
21	Windscreen wiper motor 45
23	Brake lamp switch 50
24	Distributor and sparking plugs 39
25	Engine oil pressure switch . . . 27
26	Ignition coil. 37
27	Fuse box. 18.28.57.63
28	Hydraulic pressure switch (DV.DT) 29
29	L.H. door switch. 7
30	Accessory terminal 48
31	Flasher unit 10
32	Starter motor switch. 3
33	Headlamp relay. 75
34	Lighting rheostat 65
35	Lighting for glove compartment 48

Ref	Description and Position
36	Cigarette lighter 4
37	Rear window heater . . . . . switch (except DV, DT) . . . 17
38	Heating switch. 41
39	Clock 51
	Lighting for clock 62
40	Interior lighting switch. . . . 6
41	Parking lamp rocker switch . 57
42	Lighting for heater control . 61
43	Lighting switch . . . 68.72.76. 78
44	Warning cluster :
	Warning lamp for :
	- R.H. and L.H. indicator. 10.11
	- Brake pad wear 24
	- State of charge 22
	- Rear heated window. . . . 16
	- Sidelamps 66
	- Headlamps. 75
	- Hydraulic pressure 29
	- Engine oil. 27
	- Water temperature 25

Ref	Description and Position
44	Control unit *(contd)* :
	- Tachometer 35
	- Fuel level. 31
	- Dashboard lighting 65
	- Emergency stop warning lamp 28
	- Check button 26,28,30
45	Direction indicator/horn switch . 11,54
46	Windscreen washer / wiper switch 45
47	Anti-theft switch 3.18,28,36
48	R.H side interior lamp 5
49	Petrol gauge transmitter. 32
50	Rear window heating *(option DV-DT)* 17
51	L.H side interior lamp 6
52	Boot lighting. 9
53	Rear R.H interior lamp *(DJ except PA)* 7
54	Rear L.H interior lamp *(DJ except PA)* 8
55	Rear R.H direction indicator. . 12
56	Rear R.H lighting unit : Stop lamp 49
	- Side and tail 59
	- Number plate 67

Ref	Description and Position
57	Rear L.H lighting unit : Stop lamp. 50
	- Side and tail 57
	- Number plate 68
58	Rear L.H direction indicator . . . 9
59	Horn compressor relay *(DV option)* 52
60	Horn compressor. 52
61	Lighting for cigarette lighter *(except DV)*. 60
62	Switch for reversing lamps *(except DV)*. 18
63	Ashtray lighting *(except DV)* . . . 63
64	R.H reversing lamp *(except DV)*. . 18
65	L.H reversing lamp *(except DV)*. . 19

HARNESSES

–	. . . . . Front (main)
AG.	. . . . . L.H wing
AD.	. . . . . R.H wing
AR.	. . . . . Rear
F.V	. . . . . Free lead

Key to Symbols used in diagram

- Plug connection
- Connector
- Fuse
- Manually operated switch
- Mechanical switch
- Thermal switch
- Pressure switch
- Coil
- Resistance
- Variable resistance
- Condensor
- Diode (Rectifier)
- Motor
- Lighting lamp
- Warning lamp
- Indicator